

User Manual: Sending GPRS and SMS Commands

Introduction

This manual describes the process for sending GPRS and SMS commands from the system interface. Follow these steps to ensure correct sending.

Prerequisites

- Ensure that the device is powered on and connected to the network.
- Verify that you have the necessary permissions to send commands.

Steps to Send GPRS and SMS Commands

1. Access the Main Panel

- Turn on your device (for certain types of commands) and access the user interface.

2. Select "Object Control"

- Click on the **Object Control** button located at the top of the main panel.

3. Choose the Type of Command

- Select the type of command you wish to send: **GPRS** or **SMS**.

4. Fill in the Necessary Fields

- **Select the Vehicle:**
 - Choose the vehicle to which you want to send the command from the dropdown list.
- **Select the Command Format:**
 - Choose between **Hexadecimal** or **ASCII** according to the required format for the command.

5. Send the Command

- Review all fields to ensure the information is correct.
- Click the **Send** button to proceed with sending the command.


6. Confirmation

- A confirmation message will appear on the screen once the command has been successfully sent.
- You can check the status of the command in the history section to verify its receipt.

Troubleshooting

- **Connection Issues:** Ensure that the device is connected to the network.
- **Command Not Sent:** Verify that you have correctly selected the vehicle and the GPS model.

Image of reference

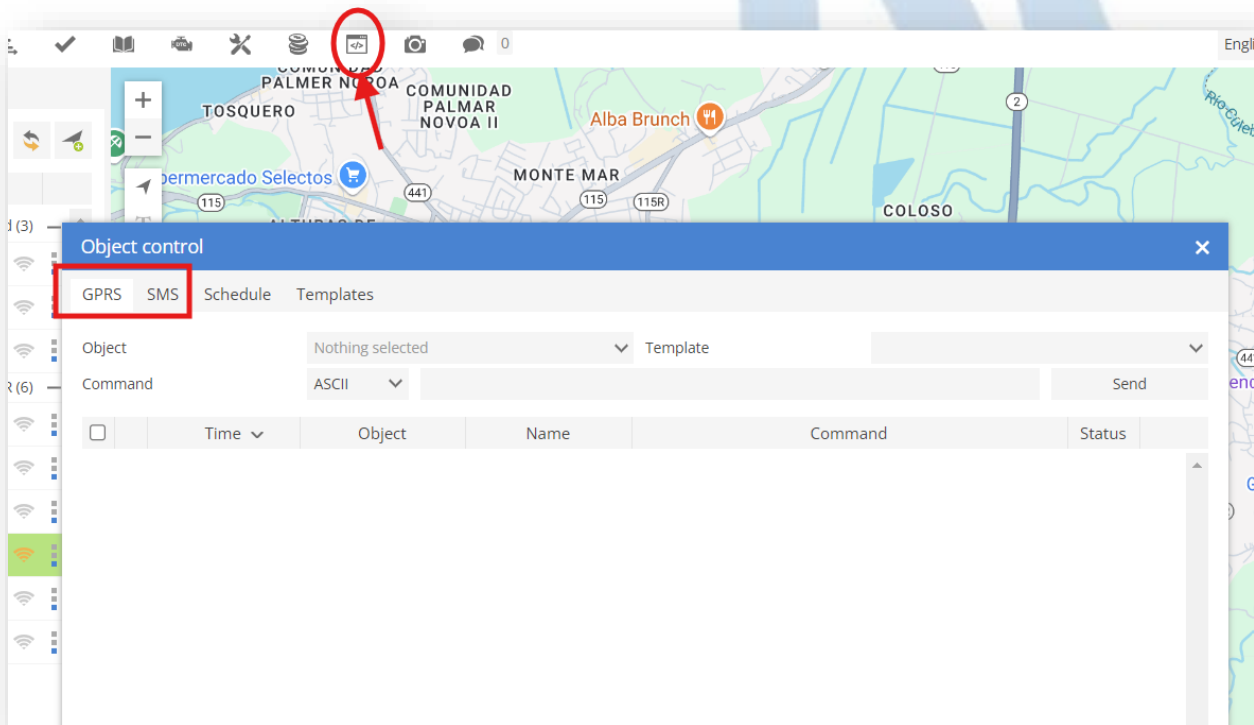

Contact

If you need additional assistance or have questions, please contact our technical support.

Contact Information



_____.



_____.



_____.

AVVIO

Confidentiality

This document is confidential and is the property of AVVIO. Total or partial distribution is strictly prohibited without prior written authorization from AVVIO. Unauthorized disclosure of the information contained in this document may result in legal action.